


# Тип 01, 02, 61, 62

## Описание

пластины для проходных,  
расточных и револьверных резцов (ГОСТ 25395-90)

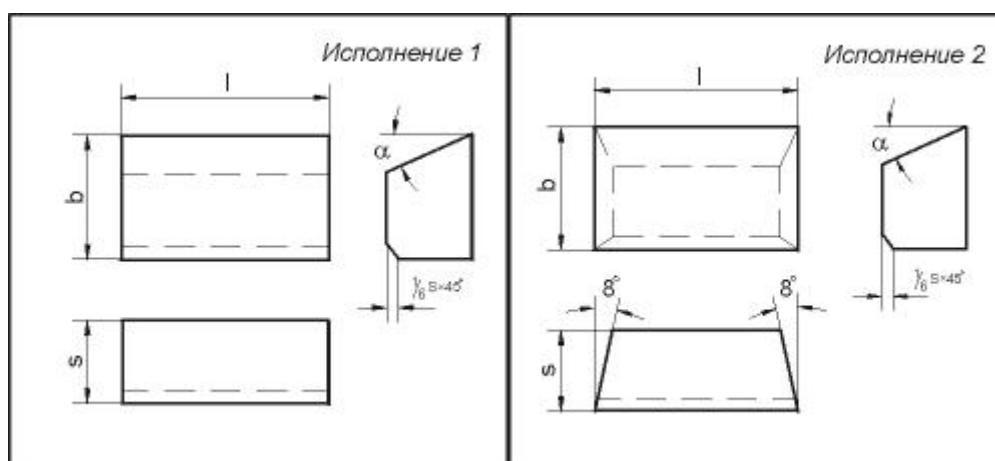

### Исполнение 1

Обозначение	L	b	s	угол альфа, град
01151	20	12	7.0	18
01251	50	20	12.0	18
01271	60	22	12.0	18
01291	5	3	2.0	
01311	6	4	2.5	
01331	8	5	3.0	
01351	10	6	4.0	18
01371	12	8	5.0	18
01391	16	10	6.0	18
01411	25	14	8.0	18
01431	32	18	10.0	18
01451	40	22	12.0	18
01471	50	25	14.0	18
01491	40	18	10.0	18
02051	12	10	4.0	18
02231	14	12	4.5	18
02251	14	12	6.0	18
02271	18	16	6.0	18

02291	18	16	8.0	18
02311	22	18	7.0	18
02351	25	20	10.0	18
02411	20	16	6.0	18
02431	25	18	7.0	18
02451	32	16	8.0	18
02511	36	20	10.0	18
02611	10	6	2.5	
02631	12	8	3.0	
02651	16	10	4.0	18
02671	20	12	5.0	18
02691	14	10	4.0	18
61151	20	12	7.0	8
61251	50	20	12.0	8
61271	60	22	12.0	8
61351	10	6	4.0	8
61371	12	8	5.0	8
61391	16	10	6.0	8
61411	25	14	8.0	8
61431	32	18	10.0	8
61451	40	22	12.0	8
61471	50	25	14.0	8
61491	40	18	10.0	8
62251	14	12	6.0	8
62271	18	16	6.0	8
62311	22	18	7.0	8
62351	25	20	10.0	8
62451	32	16	8.0	8
62511	36	20	10.0	8

## Исполнение 2

Обозначение	L	b	s	угол альфа, град
01152	20	12	7.0	18
01252	50	20	12.0	18
01272	60	22	12.0	18
01352	10	6	4.0	18
01372	12	8	5.0	18
01392	16	10	6.0	18
01412	25	14	8.0	18

01432	32	18	10.0	18
01452	40	22	12.0	18
01472	50	25	14.0	18
01492	40	18	10.0	18
02052	12	10	4.0	18
02232	14	12	4.5	18
02252	14	12	6.0	18
02272	18	16	6.0	18
02292	18	16	8.0	18
02312	22	18	7.0	18
02352	25	20	10.0	18
02412	20	16	6.0	18
02432	25	18	7.0	18
02452	32	16	8.0	18
02512	36	20	10.0	18
02692	14	10	4.0	18
61152	20	12	7.0	8
61252	50	20	12.0	8
61272	60	22	12.0	8
61352	10	6	4.0	8
61372	12	8	5.0	8
61392	16	10	6.0	8
61412	25	14	8.0	8
61432	32	18	10.0	8
61452	40	22	12.0	8
61472	50	25	14.0	8
61492	40	18	10.0	8
62252	14	12	6.0	8
62272	18	16	6.0	8
62312	22	18	7.0	8
62352	25	20	10.0	8
62452	32	16	8.0	8
62512	36	20	10.0	8